

YXZ1000R/SS/SE/XTR 3" Hood Lift Installation Instructions

Years: 2016-18 & 2019+



Disclaimer

By purchasing, installing, or using any product from Solex Offroad, the customer acknowledges and accepts full responsibility for any risks associated with its use. Solex Offroad and Solex Enterprises LLC are not liable for any damages, injuries, accidents, losses, or deaths that may result from the installation, use, or misuse of its products. Offroad powersports is an inherently dangerous activity that involves significant risks, including but not limited to collisions, rollovers, mechanical failures, unpredictable terrain conditions, and operator error. The purchaser assumes all risks and responsibilities associated with operating a vehicle equipped with Solex Offroad products.

All products must be installed correctly and inspected regularly to ensure proper function and safety. Installation should be performed by a qualified professional or an individual with adequate mechanical knowledge. Solex Offroad products are sold with a limited warranty covering defects in materials and workmanship for a period of 1 year from the date of purchase. This warranty does not cover damages resulting from improper installation, modification, normal wear and tear, or use in extreme conditions.


By purchasing and using Solex Offroad products, the customer expressly waives any claims against Solex Offroad and Solex Enterprises LLC, their owners, employees, affiliates, and distributors for any liability, injury, or loss incurred. If you have any questions about product safety, installation, or usage, please contact Solex Offroad before proceeding.

Parts List

(1) Front Nose Bracket




(2) Front Scoop Brackets (mirrored opposites)

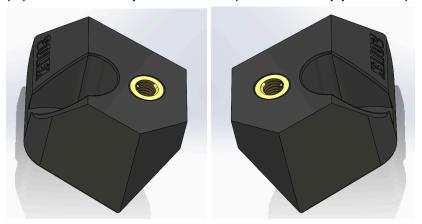

(2) Headlight Brackets (mirrored opposites)



(2) Rear Scoop Brackets (both the same)

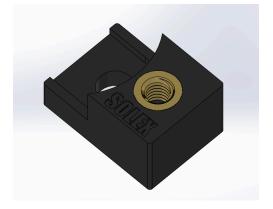

(10) M6x12mm bolts - 8mm hex



(2) Screw-in plastic expansion fasteners (Yamaha 90269-07805)



Note: screw-in plastic expansion fasteners will come installed into the brackets.

Installation Instructions

All OEM fasteners and clips will be removed from 7 spots on the front hood. The general areas are circled in blue below. Note that this applies for ALL YEARS.






ALL of the above style clips will be removed in the fastened areas described in the following steps. They will NOT be used with the new brackets and fasteners.

1. Remove the single OEM bolt and clip from the front nose so it looks like below.



2. Remove the front hood scoop rivet clips so it looks like below (left and right). These are located behind the front nose fastener on both sides. Save these clips - they will be reused.

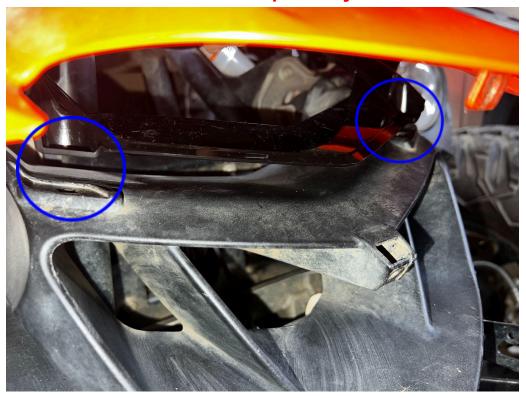






3. Remove the top outer headlight housing bolts and clips that connect to the fenders. Remove both sides. It should look like below (left and right).



4. Remove the rivet clips that connect the rear of the center scoop section to the fenders (remove both sides). These are located just in front of the shocks. Save these clips - they will be placed back at the end.





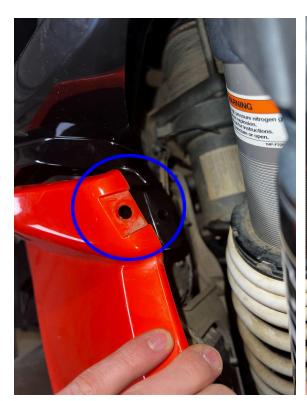



5. Remove the inner rivet clips that connect the center hood scoop to the top of the aluminum headlight frame. Remove both sides (right and left shown below, respectively).





6. Install the **rivet clips retained from step 2** into the bottom scoop brackets, but leave the center screw removed. Place the bottom brackets so that they align with plastics below the front scoop mounts. Reinstall the screw pins using a large flat head screwdriver until they are secure. **Do not over tighten**. See below (install left and right bottom brackets). **Do not install the stainless steel bolts yet.**









7. Remove the screw pins from the rear scoop brackets (already installed). Install the left and right rear scoop brackets which mount between the aluminum headlight frame and rear scoop

tabs. Reinsert the screw pins using a large flat head screwdriver so that the brackets tighten against the aluminum headlight housing. **Do not overtighten**. Install the top bolts through the rear scoop taps into the brackets. Hold the bracket steady to avoid twisting - tighten the bolts.







8. Install the bolts through the front scoop tabs and into the front scoop brackets. Tighten the bolts down but do not overtighten. Hold the bracket steady while tightening to avoid twisting.



9. Place the left and right headlight brackets into their slots on top of the headlight housings. Ensure they are pressed all the way back. Note that the brackets are mirrored and only fit properly on one side. Loosely install the bottom bolts, then push the fender into place and loosely install the top bolts.












10. Place the nose bracket in the front with the angled part pointing down and curve towards the front. Loosely install two bolts.



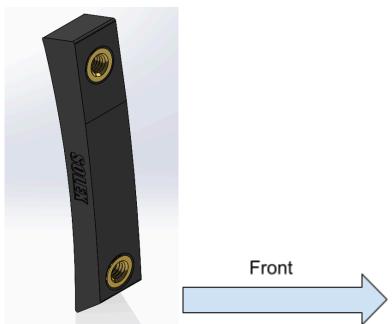

11. Tighten down all loose bolts. Be sure not to over tighten and hold brackets to avoid twisting. Next, reinstall the plastic rivets (both sides) that hold the rear of the center scoop section to the front fenders.



12. Your hood lift kit is now installed.

These instructions are not for redistribution or copy unless otherwise approved by Solex Enterprises LLC.

Instructions for installing XTR/SS SE center light brackets

NOTE: Continue if you have an XTR or SS SE model and are equipping it with the option "XTR SS SE light brackets". Ignore the following instructions if you do not have one of these models or are using a standard kit only.

Parts List





(2) M6x40mm bolts




Note: bolts may come installed into brackets.

Installation Instructions

1. Remove the bolts holding the center lights to the frame brackets (circled in the below image).



2. Install the center light lift brackets onto the bottom of the light pods. Ensure the label "SOLEX" is facing the front of the machine. You can unplug and remove the center lights from the SxS if it makes this process easier. Tighten the M6x40mm bolt, but do not overtighten. This bolt may be a little tight installing - this is normal.

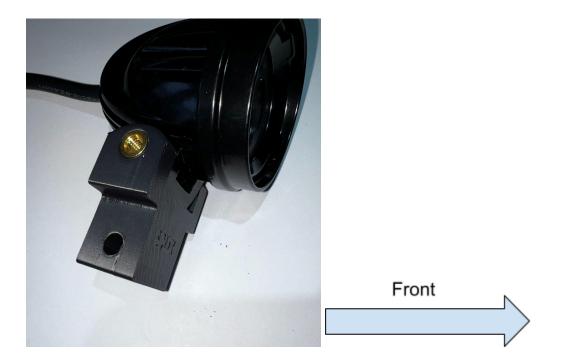



- 3. Install the light pod with the lift bracket back onto the SxS mounting brackets. Utilize the OEM bolts removed in step one. Tighten up the bolts to secure the light pod assembly, but do not overtighten. If the center light pods were removed from the SxS, plug them back in.
- 4. Your center light pod lift brackets are now installed.

These instructions are not for redistribution or copy unless otherwise approved by Solex Enterprises LLC.