



## YXZ1000R/SS Switch Knob Installation Instructions All Years

*\*Please read entire instruction sheet before beginning install\**



***Disclaimer***

*By purchasing, installing, or using any product from Solex Offroad, the customer acknowledges and accepts full responsibility for any risks associated with its use. Solex Offroad and Solex Enterprises LLC are not liable for any damages, injuries, accidents, losses, or deaths that may result from the installation, use, or misuse of its products. Offroad powersports is an inherently dangerous activity that involves significant risks, including but not limited to collisions, rollovers, mechanical failures, unpredictable terrain conditions, and operator error. The purchaser assumes all risks and responsibilities associated with operating a vehicle equipped with Solex Offroad products.*


*All products must be installed correctly and inspected regularly to ensure proper function and safety. Installation should be performed by a qualified professional. By purchasing and using Solex Offroad products, the customer expressly waives any claims against Solex Offroad and Solex Enterprises LLC, their owners, employees, affiliates, and distributors for any liability, injury, or loss incurred. If you have any questions about product safety, installation, or usage, please contact Solex Offroad before proceeding.*

## Parts List

(1) 4WD Switch Knob



(1) HeadLight Switch Knob

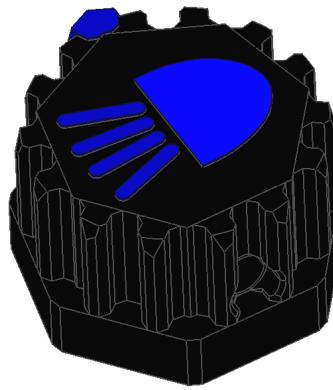

(2) M4 x 10mm Stainless Steel Set Screws



## Installation Instructions

1. Turn the OEM 4WD and Headlight switch knobs to their center position. These knobs are retained by a tight fit and spring clip. To remove, it's recommended to gently pry underneath to begin working them off the switch post. Use a large flat blade screw driver or small pry bar. Protect the interior plastics around the knobs as needed to avoid scratches or damage. **Alternate prying on the front and back so the switches come off straight.** **TIP:** Hold the top of the switch with your hand to help keep it straight and guide it off the switch post.





*Bottom of OEM Knob*



2. Once the OEM knobs have been removed, clean the switch posts to ensure no mud or debris is present. Note the blade portion of the switch post (indicated by the **red** arrow below). The blade should be pointing backwards, in-line with the center position. This indicates the switch is still in the center position.



3. Take your new SOLEX Offroad switch knob and ensure you have the proper label for the position you're installing (4WD on top post, Light on bottom post). Ensure the M4 x 10mm Stainless Steel Set Screws are REMOVED from the switch knobs. Align the top colored arrow of the switch knob with the center position (see **red** arrow below) and push the knob onto the post until it bottoms out. SLIGHTLY rock the knob back and forth while pushing down to ensure it's fully seated, but **DO NOT ATTEMPT TO SWITCH POSITIONS.**



4. Insert the set screw into the threads on the back of the switch knob and tighten. **TIP:** use medium-strength thread locker to ensure the set screw does not back out. Use a 2mm allen wrench to tighten. **DO NOT OVERTIGHTEN.**



5. Once both knobs are tightened, operate the switches to ensure functionality. Return the switches to their original positions. Your SOLEX Offroad YXZ 1000 Switch Knobs are now installed!

If you have any questions, please reach out to  
[solex.enterprises24@gmail.com](mailto:solex.enterprises24@gmail.com)

*These instructions are not for redistribution or copy unless otherwise approved by SOLEX Enterprises LLC.*