



YXZ1000R/SS Radiator Cover Locking Knob Installation Instructions

All Years

Please read entire instruction sheet before beginning install




Disclaimer

By purchasing, installing, or using any product from Solex Offroad, the customer acknowledges and accepts full responsibility for any risks associated with its use. Solex Offroad and Solex Enterprises LLC are not liable for any damages, injuries, accidents, losses, or deaths that may result from the installation, use, or misuse of its products. Offroad powersports is an inherently dangerous activity that involves significant risks, including but not limited to collisions, rollovers, mechanical failures, unpredictable terrain conditions, and operator error. The purchaser assumes all risks and responsibilities associated with operating a vehicle equipped with Solex Offroad products.

All products must be installed correctly and inspected regularly to ensure proper function and safety. Installation should be performed by a qualified professional. By purchasing and using Solex Offroad products, the customer expressly waives any claims against Solex Offroad and Solex Enterprises LLC, their owners, employees, affiliates, and distributors for any liability, injury, or loss incurred. If you have any questions about product safety, installation, or usage, please contact Solex Offroad before proceeding.

Parts List

(2) Radiator Cover Locking Knobs (colors may vary)

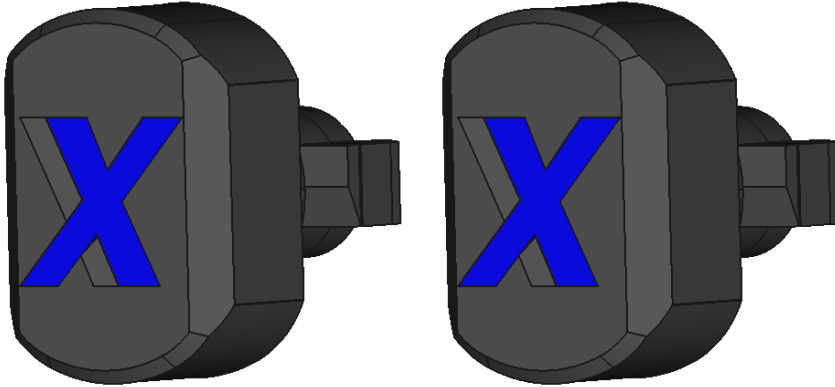


Installation Instructions

1. Remove the radiator cover from the YXZ. Lift the OEM latch tabs and then turn them 90 degrees. Lift up on the bottom of the radiator cover and pull up and back to release it from it's slots.



2. Unclip the OEM latches from the cover. Flip the cover over. Push the retention tabs (shown at red arrows below) on OEM latches inwards while pushing outwards. The latches should pop free.

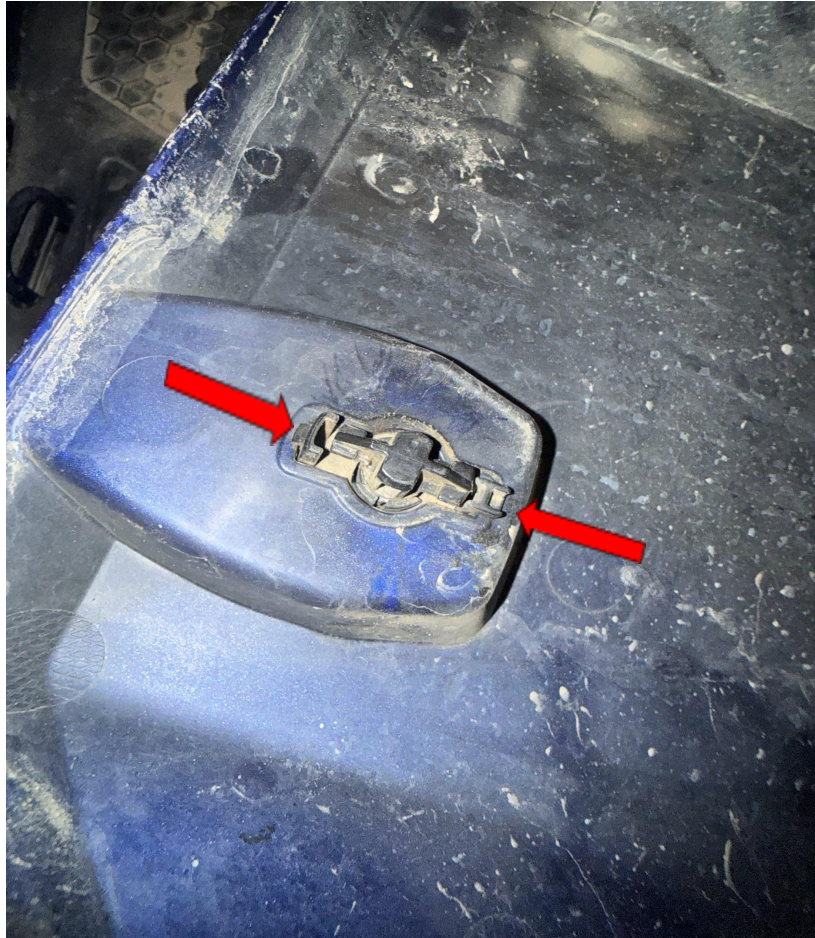

3. Install the SOLEX radiator cover locking knobs. Clean the radiator cover latch holes and the holes on the YXZ frame. Place the radiator cover back on the YXZ by sliding it into place and pushing downwards gently. Install the radiator locking knobs by

inserting them into the open slots and turning 90 degrees.

NOTE: A small amount of grease is recommended to be applied to the knob locking surfaces to ease install and removal. **NOTE:** One tab is slightly larger than the other, therefore the knobs can only insert in one orientation. If the knobs are not sliding in easily, rotate them 180 degrees and try again. The knobs should be facing straight up and down (longwise) when in the locked position. See images below.



Locked position shown in the image right above.



Your SOLEX Offroad radiator cover locking knobs are now installed.

MAINTENANCE

- Check before every use to ensure the locking knobs are properly locked and the radiator cover is secured.
- Clean and apply new grease to the locking surfaces every so often.

If you have any questions, please reach out to

solex.enterprises24@gmail.com

Check out more YXZ1000R products on our website, below!



[Yamaha YXZ1000R Premium Accessories | Hood Lifts | Switch Knobs
| SOLEX Offroad](#)

*These instructions are not for redistribution or copy unless otherwise approved by
SOLEX Enterprises LLC.*